



# Disassembling Arnova 7K G3 Rear Cover

This guide will show you how to remove the back cover of the Arnova 7K G3.

Written By: Tyler Sigafoose



## INTRODUCTION

Before replacing any components on the Arnova 7K G3 tablet, disassembly is required. That process starts with removing the rear cover to gain access to a majority of the components including the battery, speaker, and logic board.

---



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Disassembling Arnova 7K G3 Rear Cover



- Locate the four 5mm Phillips head screws, one at each corner of the tablet.
- Remove the screws using the Philips #00 screwdriver.

## Step 2

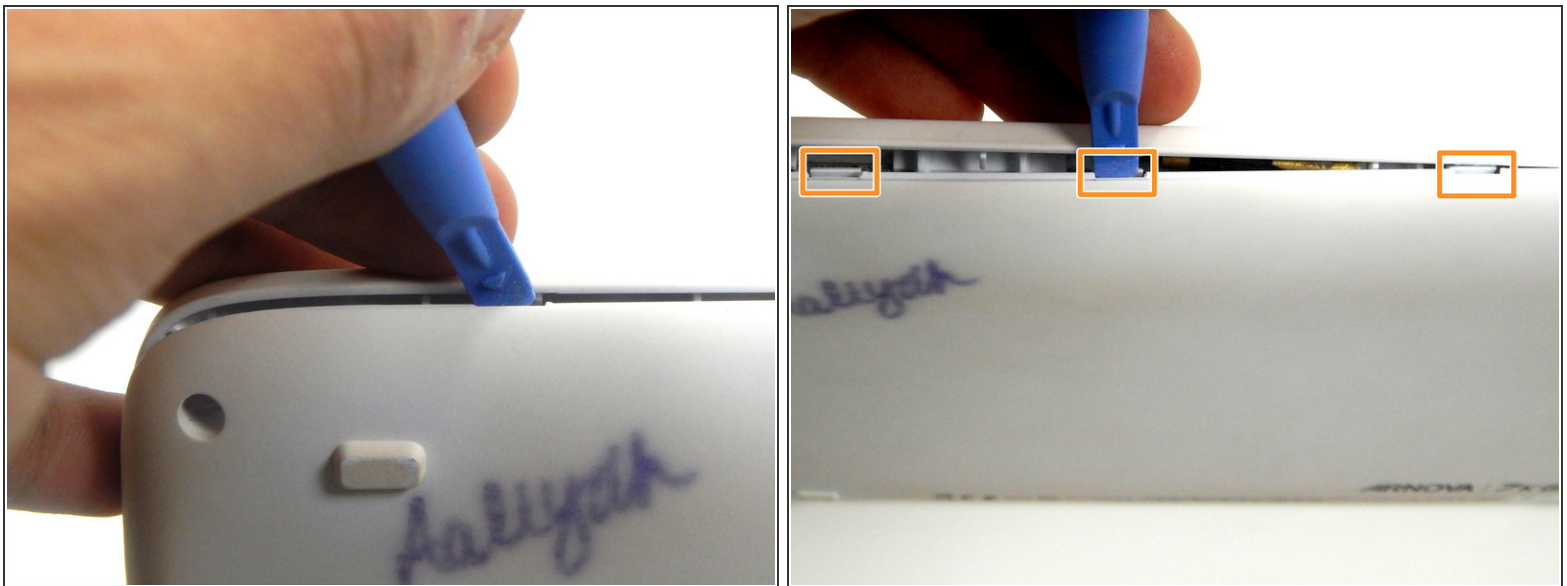

- Next step is to pull apart the front and rear cover using the iFixit Plastic Opening Tool.
- For that, locate the notches between the two cases.
- Place the tool in the notches and start separating the two covers apart.



## Step 3



- Repeat step two until 3/4th of the rear cover is unlatched.
- Proceed to remove the rear cover by gently pulling it apart by hand.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 12:18:20 PM.